


Safety Circuit Description (MTCC-Y)

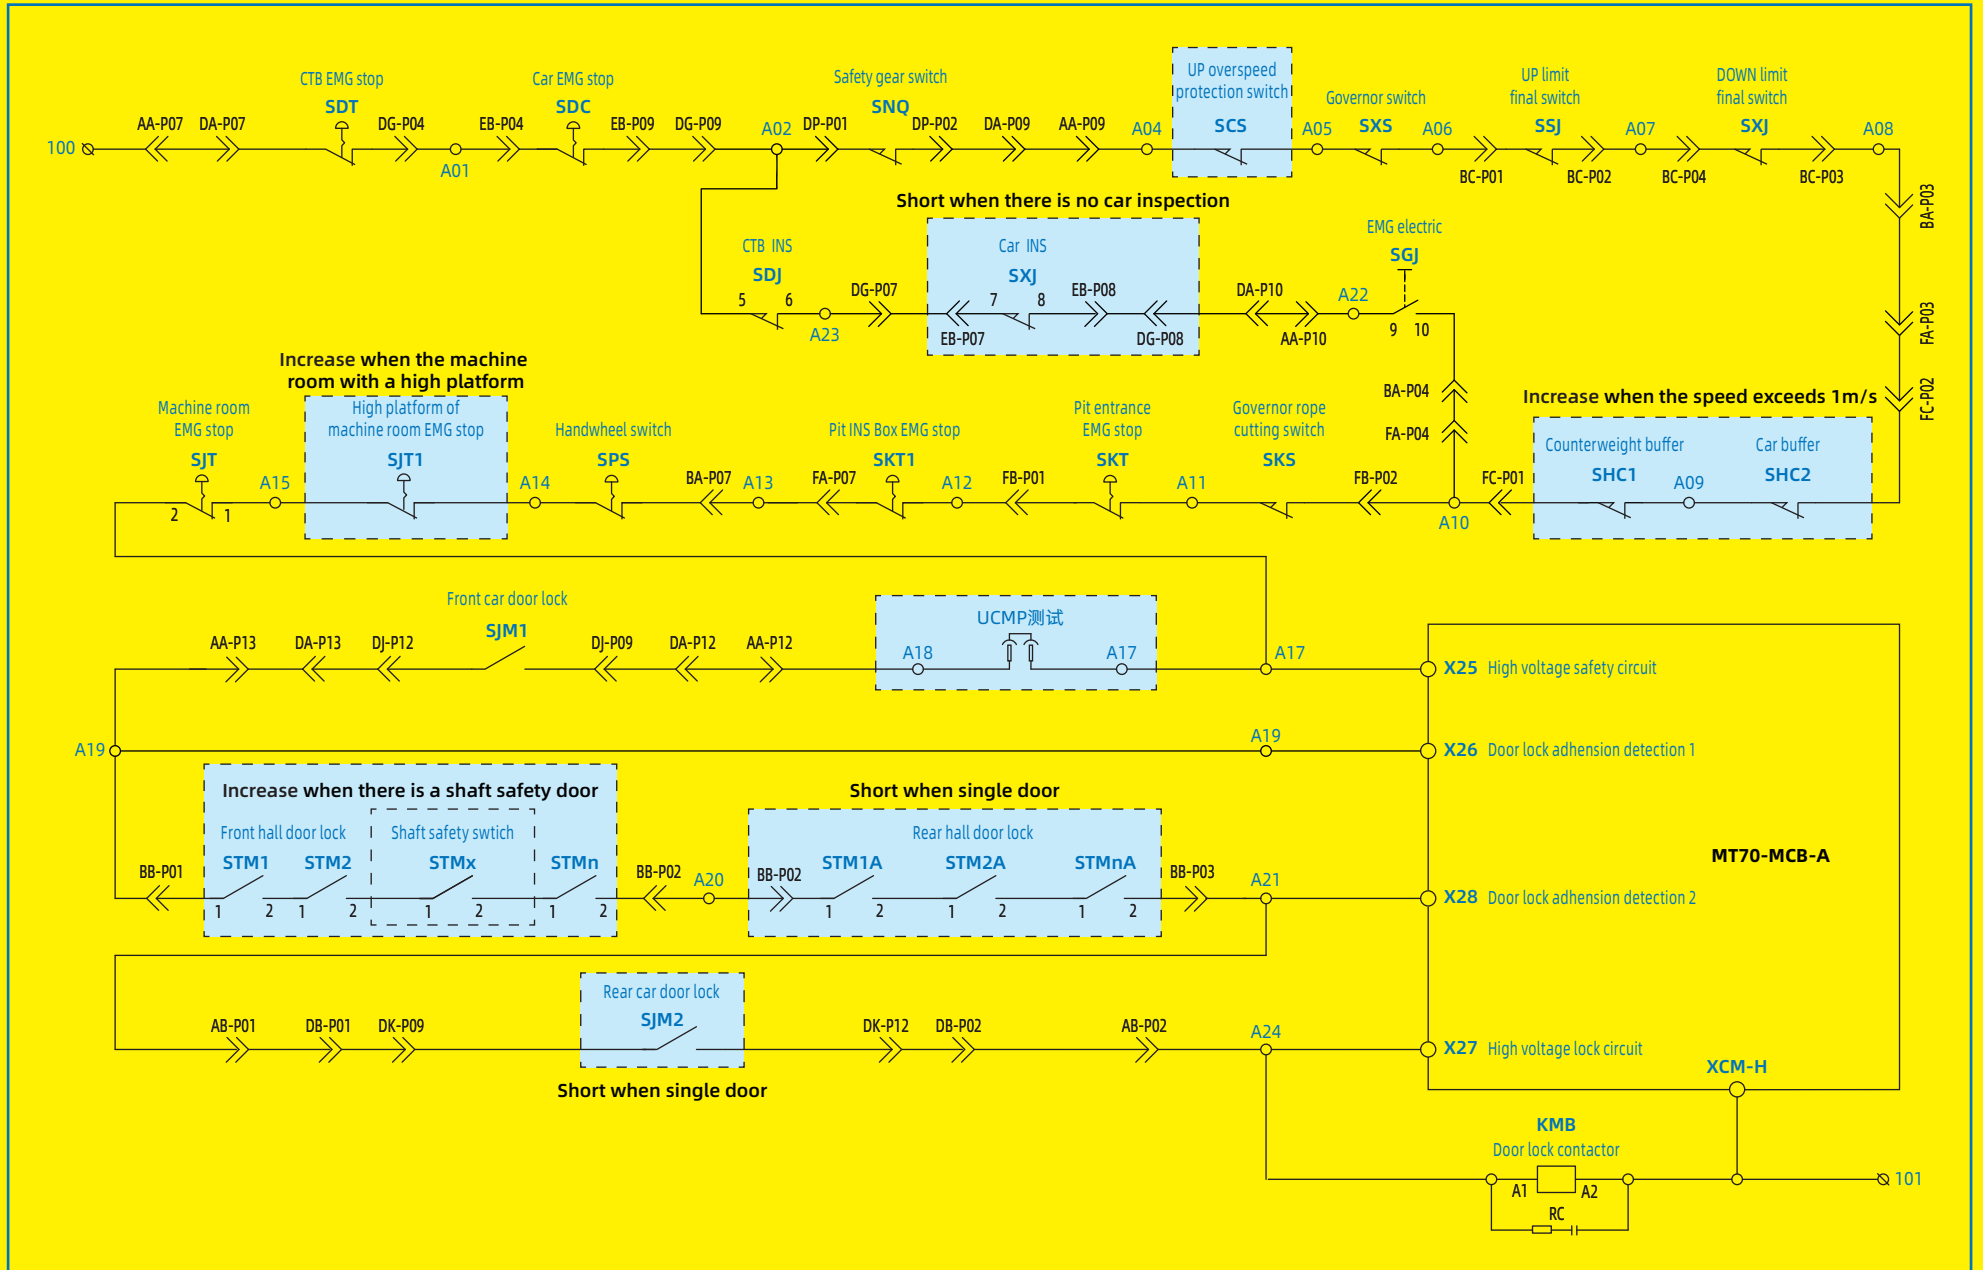

Brake Force Test Description

Set Parameter

F03.18	Detection method	1 [0 - 2]
F03.20	Detection time point	3:00 [00:00 - 23:59]
F04.14	Detection duration	5 [1 - 10s]
F04.15	Detection torque	100 [60 - 150%]
F04.16	Detection of allowable pulse size	5 [1 - 99]
F04.17	Number of successful detection	0 [0 - 65535]

Test Step (Automatic or Manual)

1.	Confirm that the elevator is in automatic state, the safety circuit is normal, the door lock circuit is closed, and the system has no running direction.
2.	Start the brake test: Set F25.04 Bit8 = 1 or F14 = 1 (MCB small keypad).
3.	Automatic detection: After setting the parameter (step 2), it will start automatically. Manual detection: The elevator enters the inspection / emergency electric state and gives the inspection command (revocable) to start.
4.	Confirm the value of F04.17 plus 1, which means the test is successful. Set F03.18, Syn. motor is 2 (automatic), Asyn. motor is 0 (invalid).
5.	The control system reports E66 fault, which means the detection failed. Approach: <ul style="list-style-type: none"> Stop any operation of the elevator, and the maintenance personnel should adjust the brake torque to the specified value (at least >110% of the motor torque). Re-test, until the test is successful (the value of F04.17 plus 1), the fault will be reset.

UP Running Overspeed Test Instructions


1.	Confirm that the cabin is empty.
2.	Cancel all landing calls and stop door drive operation.
3.	Run lift to the bottom floor.
4.	Run lift from bottom floor at full speed. Considering site safety, lift should not run at up running limit speed.
5.	The speed governor acts and lift stops. If there is a rope clamp device, the rope clamp will act.
6.	Further operations after the test finished: <ul style="list-style-type: none"> For MR, manually restore the speed governor switch. If there is a rope clamp device, restore the rope clamp switch. For MRL, press the restore speed governor switch button.
7.	Restart all landing calls and door drive operation.
8.	Run the lift and check whether the lift can run normally.

Door Lock Bypass Function Description

Set Parameter

F12.04 = 150	X4 is normally close for the bypass signal
F26.16 Bit9 = 0	Do not open the manual door

Test Step

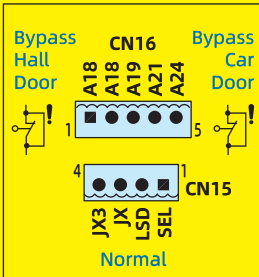1.	Normal: <ul style="list-style-type: none"> Plug 4Pin short-circuit terminal to CN15. Bypass Car Door: <ul style="list-style-type: none"> Plug the 4Pin short-circuit terminal to the right side of CN16. The car door lock is short-circuited, the door lock bypass signal is valid, and the control system reports E73 fault. Bypass Hall Door: <ul style="list-style-type: none"> Plug the 4Pin short-circuit terminal to the left side of CN16. The hall door lock is short-circuited, the door lock bypass signal is valid, and the control system reports E73 fault. 
2.	The elevator enters the inspection / emergency electric state, press and hold the Up and Run buttons, or the Down and Run buttons at the same time, the elevator will run at a slow speed, and the car roof will alarm with sound and light.
3.	Plug the 4Pin short-circuit terminal back to CN15 , and the elevator returns to normal state.

UCMP Functional Test Description

Set Parameter

F12.02 = 3	X2 is NO in door area
F12.08 = 29	X8 is NO for closed door feedback
F12.26 = 4	X26 is high pressure door lock adhesion
F12.27 = 3	X27 is high pressure door lock 2
F12.31 = 3	Y4 is the output of the closed door contactor
F16.05 Bit7 = 0	Do not shield E65 fault

Test Step

1.	Confirm that the car stops at the door zone, there is no passenger in the car, and the door lock is closed (MCB board indicators X26, X27, X28 are on).
2.	Elevator enters inspection / emergency electric state.
3.	Start UCMP test: Set F25.04 Bit7 = 1 or F15 = 1 (MCB small keypad). <ul style="list-style-type: none"> Note: After running once or power off, the setting parameters are automatically cleared.
4.	Disconnect the UCMP test switch of the control panel (indicators X26, X27, X28 are off).
5.	Press and hold the Up and Run buttons, or the Down and Run buttons at the same time, the system will output the door lock signal and short-circuit the door lock (MCB board indicators Y5, X8, X26, X27, X28 are on). The elevator runs out of the door zone (the MCB board indicators X1 and X2 are off in turn), and the system stops outputting the door closing signal (indicators Y5, X8, X26, X27, X28 are off).
6.	The control system reports E65 fault, the test is complete. Fault reset method: <ul style="list-style-type: none"> In the INS mode, set the MCB small keypad F02 = 1, and press the SET key. In the INS mode, press the STOP key on the keypad. Note: If the elevator has additional brake, reset the additional brake first.